


SD 卡刷机教程

- 1、将 SD 卡刷机包的 3 个文件拷贝进 SD 卡或 TF 卡里面(注意 SD/TF 卡里面只能有这 3 个文件，其他文件不能存在!!!)


The 3 files with SD card brush pack copy into the SD card or TF Card
(SD/ TF card can only have this 3 documents, other documents can not exist!!!)

 factory_update_param.aml	2017/5/11 13:59	AML 文件	1 KB
 recovery.img	2017/5/11 11:59	360压缩	11,140 KB
 x98pro-ota-root.zip	2017/5/11 12:05	360压缩 ZIP 文件	829,725 KB

- 2、SD 卡刷机，插上 SD 卡或 TF 卡后，HDMI 线分别链接显示屏与 TV BOX
SD card brush, insert the SD card or TF card, HDMI display and TV BOX link line respectively

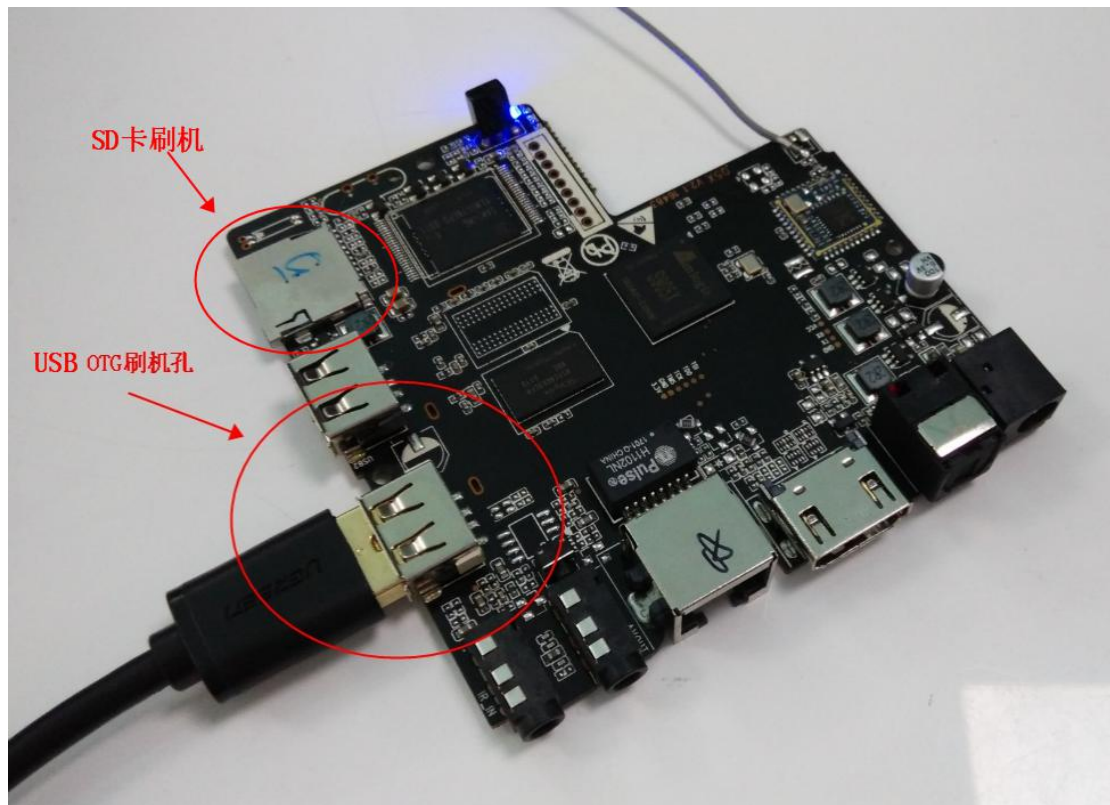

- 3、如图，按住 AV 孔的复位键后，插上电源
As shown, hold down the reset button for the AV hole and plug in the power

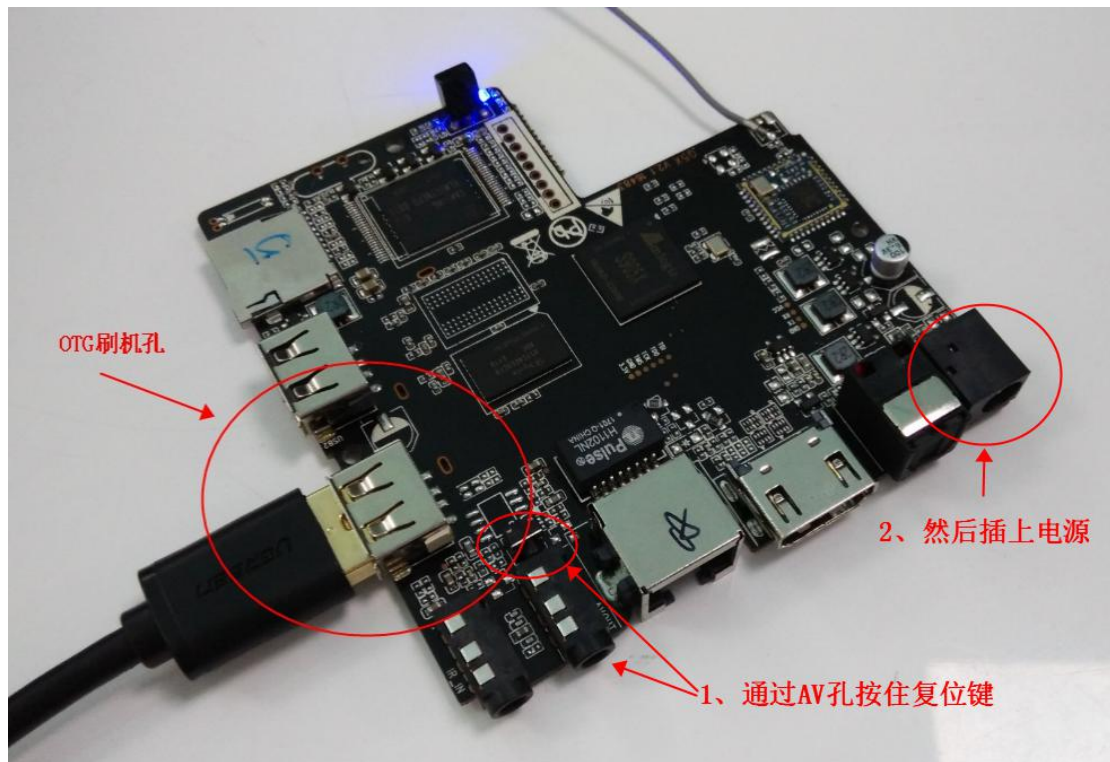

- 4、接着显示屏会开机后显示安卓 LOGO（此时刷机中，不可断电或插拔电源！），可不必要再按住 AV 孔复位键
and then the screen will turn on the display after the Android LOGO
(at this time, the machine can not be power or plug and drop power!) ,
You don't have to press the AV hole reset button
- 5、刷机成功后，TV BOX 会重启，预装 APKs
after the success of the brush machine, TV BOX will restart, pre
installed APKs
- 6、在 SETTING 里面找到出厂设置，点击恢复出厂设置，再重新开机，刷机成功
Found inside the factory settings in SETTING, click restore factory
settings, and then restart, brush success